




Installation Recommendations

Face Fixing Channel-It™


Step 1

Each Side Channel needs a minimum of 3 Screws (Flat Head - Self Tappers)
1 close to Top, 1 Close to Bottom, 1 Middle.
Drill through Front & Rear Wall of Side Channel with 6mm Bit.

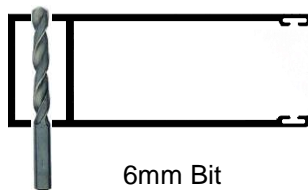

Step 2


Drill through 'Front Only' with a 10mm Bit to allow the Screw Head & Driver Bit through.
After installation, insert 10mm Plug to cover the hole.

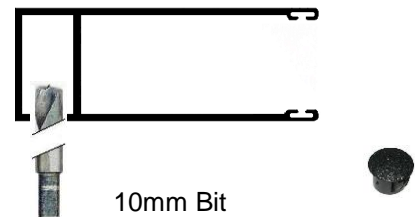

Inside Reveal Fixing Channel-It™


Step 1

Each Side Channel needs a minimum of 3 Screws (Flat Head - Self Tappers)
1 close to Top, 1 Close to Bottom, 1 Middle
With Side Channel facing down, Drill through both Rear & Middle walls with 6mm Bit

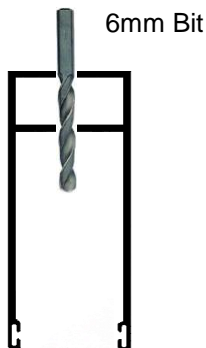

Step 2

Turn Side Channel over and Drill through Middle Only' with a 14mm Bit to allow the Screw Head & Driver Bit through.

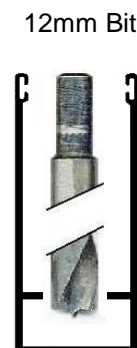

Slide Tongues



Place the Tongues (one each side, with Grub Screws attached) into the Bottom rail slot with 'Narrow End' facing out. *(This is the last process of installation)*

Wind down the blind to the required height (usually right to the ground), then mark where the Slide Tongues hit the Middle wall of the Side Channel. Use a 14mm Bit to then drill out the locking hole. This process can be repeated as many times as the customer requires, for extra locking positions.

note You can often use the Inside Reveal Fix installation holes as your Slide Tongue locking hole.*

